


- ① ATMOSPHERIC VACUUM BREAKER
- ② SHOWN IN SINGLE ZONE CONFIGURATION
- ③ CAN BE USED IN MANIFOLD CONFIGURATION
(SEE CC-W1)

NOTES:

1. SHALL BE INSPECTED BY SLWSD UPON INSTALLATION.
2. NO DOWNSTREAM VALVES ALLOWED.
3. USE 1 ATMOSPHERIC VACUUM BREAKER PER ZONE.
4. INSTALL AT LEAST 6" ABOVE HIGHEST SPRINKLER IN RESPECTIVE ZONE.
5. NEVER INSTALL BELOW GRADE.
6. MUST BE PROTECTED FROM FREEZING.
7. SHALL NOT BE MODIFIED IN ANY WAY.
8. SHALL NOT BE SUBJECT TO BACKPRESSURE.
9. MAY NOT BE INSTALLED ON SYSTEMS UTILIZING COMPRESSED AIR WINTERIZATION FITTING.
10. MAY NOT BE SUBJECT TO MORE THAN 12 HOURS OF CONTINUOUS PRESSURE.

SCALE: NTS

 <p>Silver Lake Water & Sewer District</p>	
<p>ATMOSPHERIC VACUUM BREAKER</p>	
DATE: 11-2022	DWG: CC2